HONDA

# INSTALLATION INSTRUCTIONS

| Accessory | Application | Publications No. |
|---|---|---|
| **SECURITY SYSTEM OPTIONS** | **1999 ACCORD 2- AND 4-DOOR (EXCEPT V6)** | **AII 20015** |
| | | Issue Date **SEP 1998** |

## PARTS LIST

**Option Harness (sold separately):**
**P/N 08E57-S84-100**

Security system optional harness

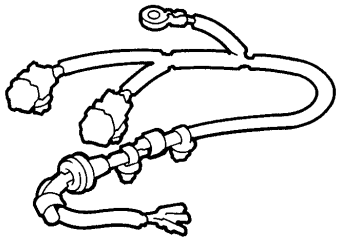

Relay bracket

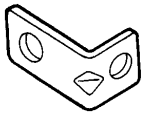

3-Pin connector

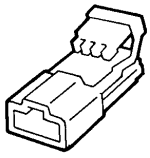

Ground bolt

8 Long wire ties

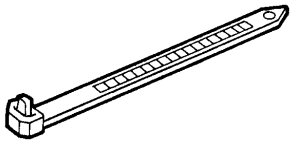

Wire tie with clip

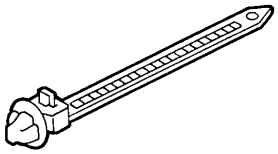

2 Short wire ties

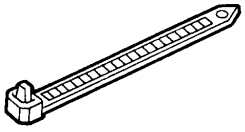

**Siren Kit (sold separately):**
**P/N 08E49-S84-101F**

Siren

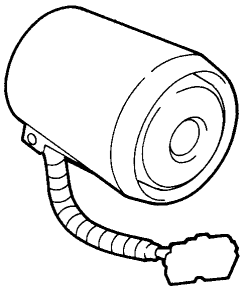

Siren bracket

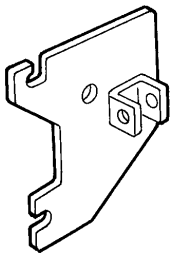

Backing plate

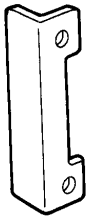

2 Washer-bolts, 6 x 16 mm

Flange nut, 6 mm

Washer-bolt, 6 x 32 mm

**Hood Switch Kit (sold separately):**
**P/N 08E49-S84-100G**

Hood switch

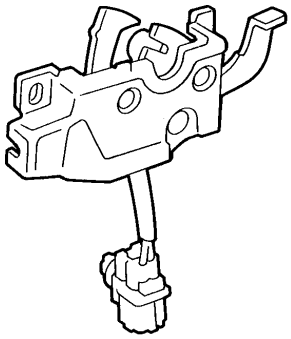

## TOOLS AND SUPPLIES REQUIRED

#2 Phillips screwdriver
Small flat-tip screwdriver
Felt-tip pen
10 mm Combination wrench
10 mm Socket
Ratchet
Silicone sealer
Electrical tape

1998 American Honda Motor Co., Inc - All Rights Reserved.

***Illustration of the Security System Options Installed on the Vehicle***

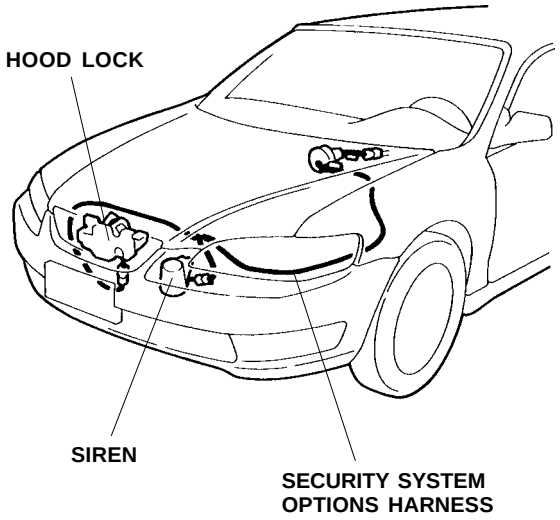


## INSTALLATION

**Customer Information:** The information in this Accessory Installation Instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your car. These procedures should not be attempted by "do-it-yourselfers."

1. Make sure you have the anti-theft code for the radio, then write down the frequencies for the preset buttons.

2. Disconnect the negative cable from the battery.

3. Open the hood, and remove the right and left radiator brackets (one bolt for each bracket).

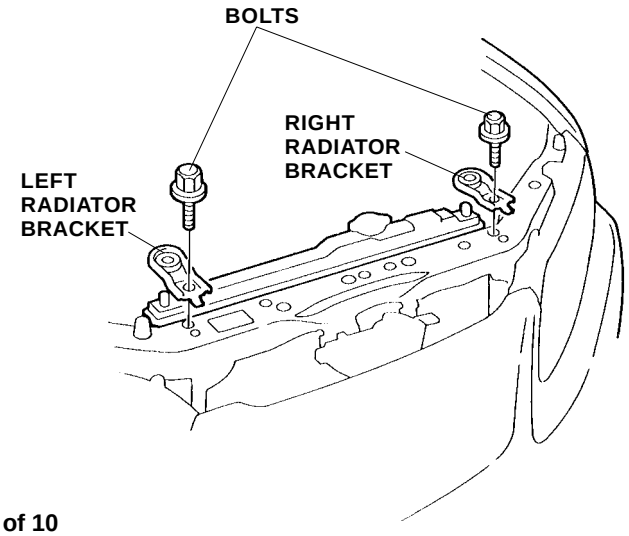


4. Inside the passenger's compartment, remove the front console lower cover (four retaining clips).

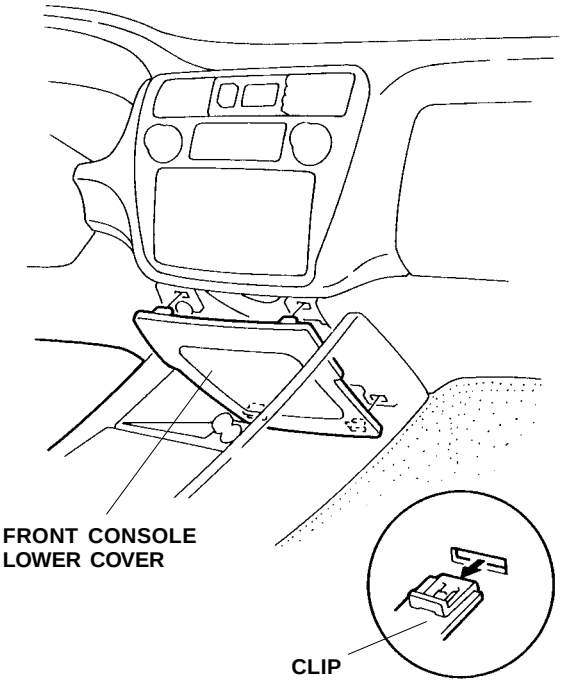


*If the vehicle you're working on is equipped with an optional ashtray with cigarette lighter, continue with step 5, if not, go to step 6.*

5. Remove the ashtray with cigarette lighter, (two self-tapping screws, one connector, and four retaining clips).

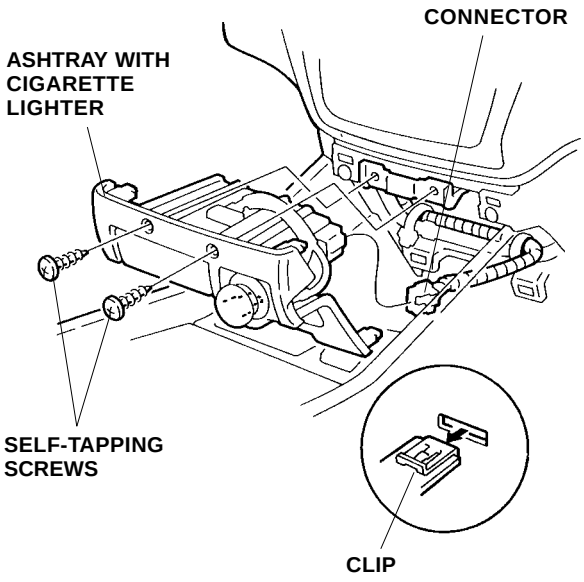






1998 American Honda Motor Co., Inc - All Rights Reserved.

6. Remove the left fuse box cover (three clips and two tabs).

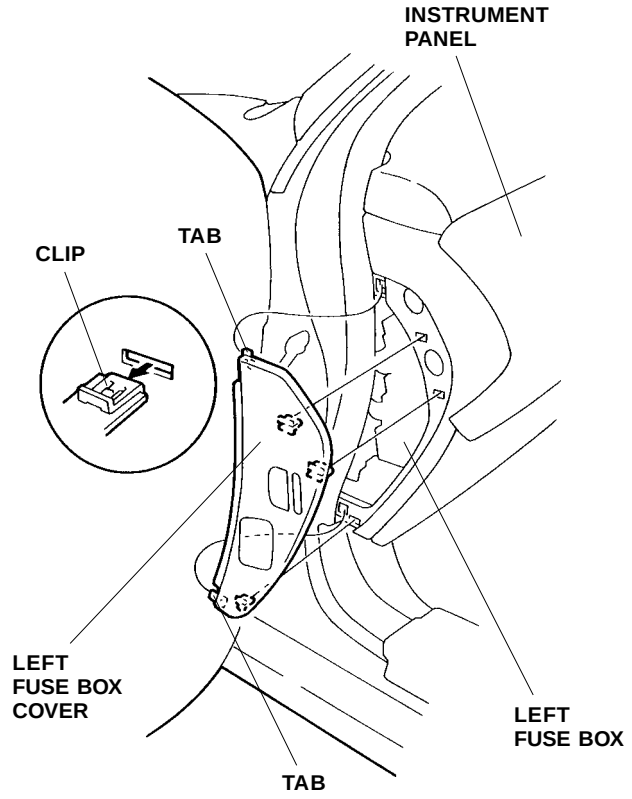


7. Remove the driver's dashboard lower cover (three screws and five retaining clips).

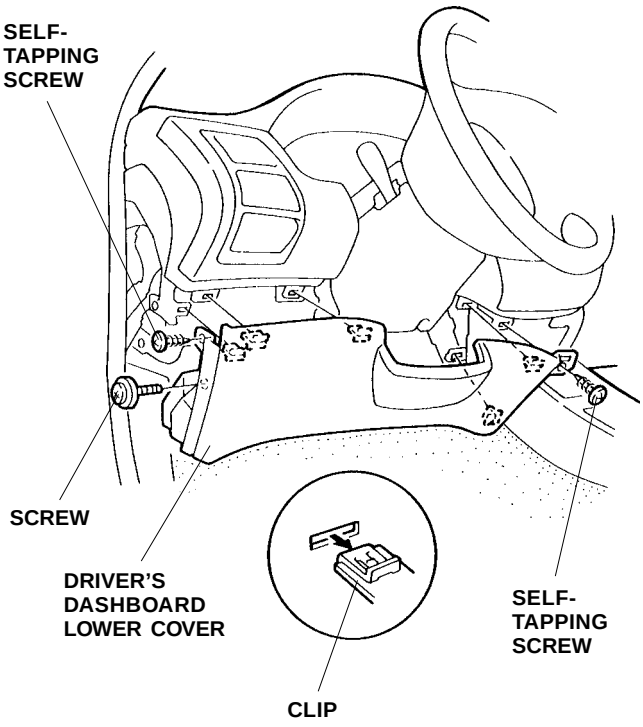


*If the vehicle you're working on is equipped with optional fog lights, go to step 10, otherwise continue with step 8.*

8. Above and to the right of the accelerator pedal, cut out and remove the insulator; then push the grommet concealed under the insulator out into the engine compartment.

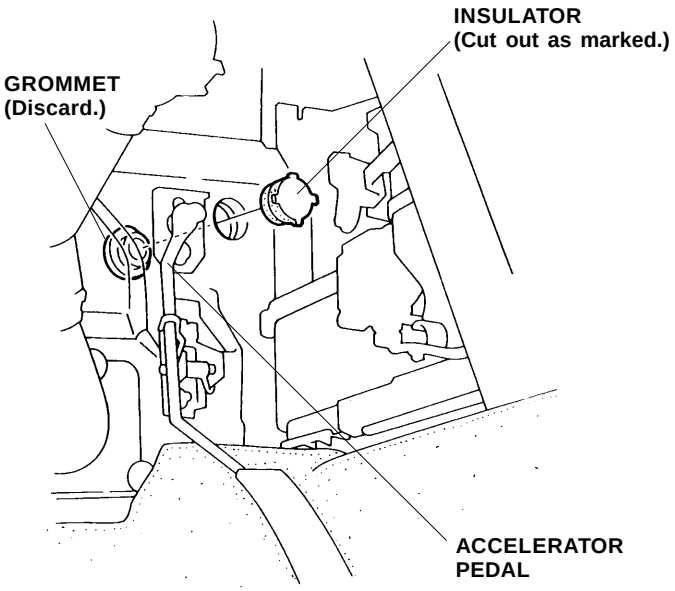


9. From the engine compartment, route the terminal ends of the security system options harness into the cabin through the grommet hole. Apply a small amount of silicone sealer to the grommet, and seat the grommet in the grommet hole.

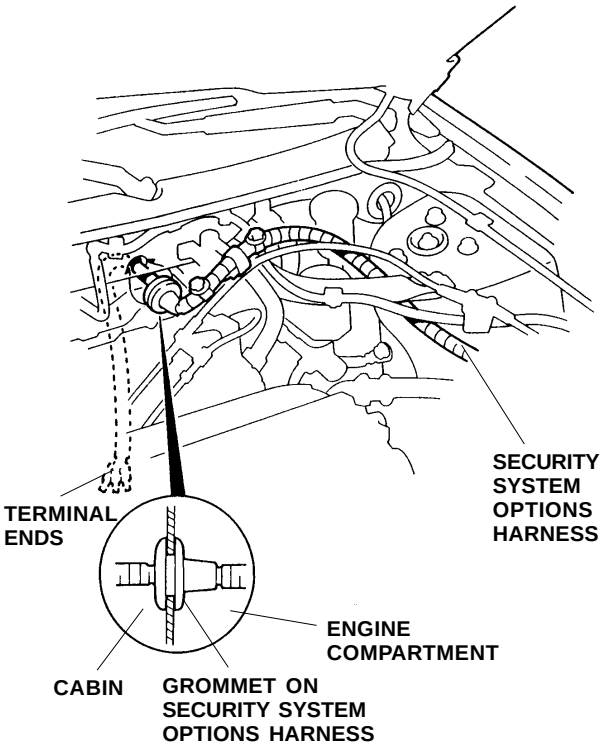


1998 American Honda Motor Co., Inc - All Rights Reserved.

*If the vehicle you're working on is equipped with optional fog lights, continue with step 10, if not, go to step 15.*

10. From the engine compartment, unplug the 1-pin connector from the fog light harness, and push the fog light harness grommet into the cabin.

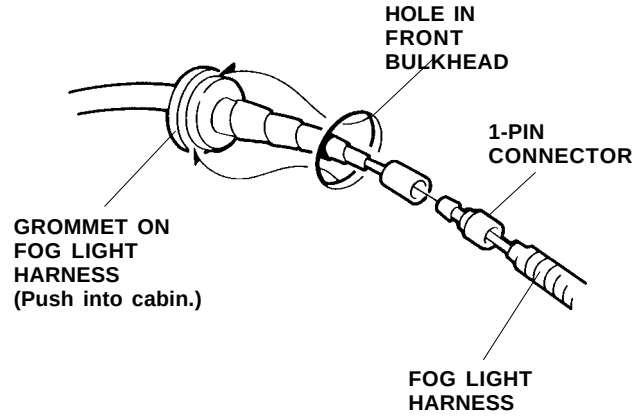


11. Get the security system options harness. Locate the two 1-pin connectors taped to the terminal ends of the security system options harness. Remove the tape to free the 1-pin connectors.

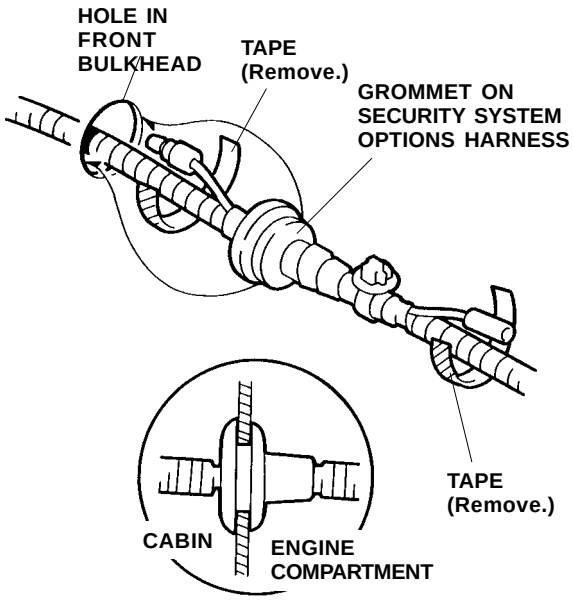


12. From the engine compartment, route the terminal ends of the security system options harness into the cabin through the grommet hole. Apply a small amount of silicone sealer to the grommet, and seat the grommet in the grommet hole.

13. Plug the 1-pin connectors from the fog light harness inbetween the 1-pin connectors you freed on the security system options harness. Wrap electrical tape around each of the 1-pin connectors to secure them to the harness. (One connector is inside the cabin, and the other is inside the engine compartment.)

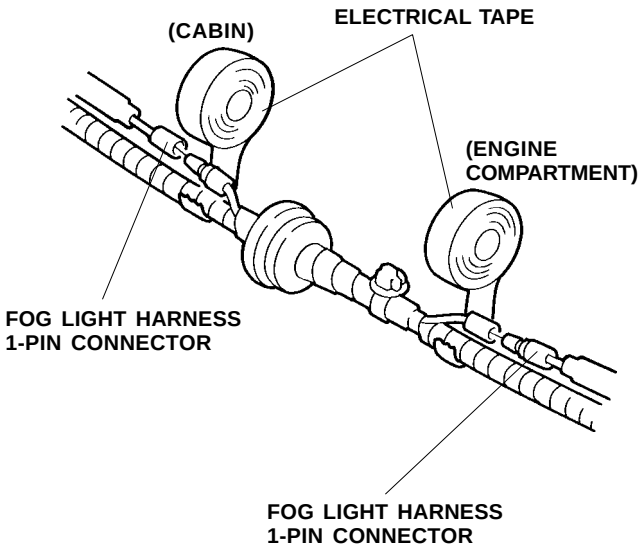


14. Attach the security system options harness to the fog light harness with one long wire tie next to the clip located on the fog light harness.

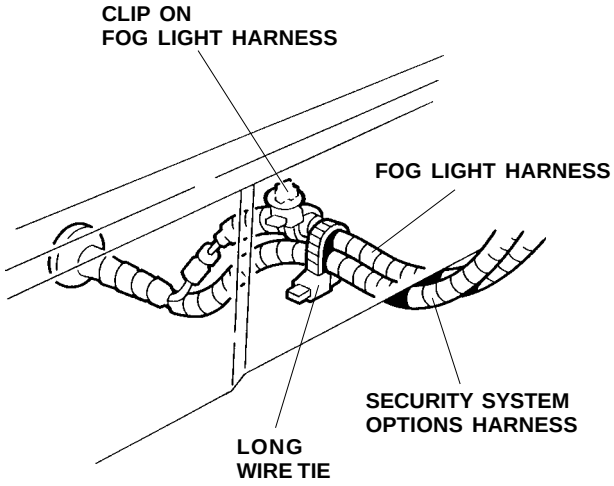




All 20015 (9809)

1998 American Honda Motor Co., Inc - All Rights Reserved.

15. Remove the fuel line holder bolt mounted to the engine bulkhead, and attach the relay bracket in the direction shown using this bolt. Retighten the bolt securely.

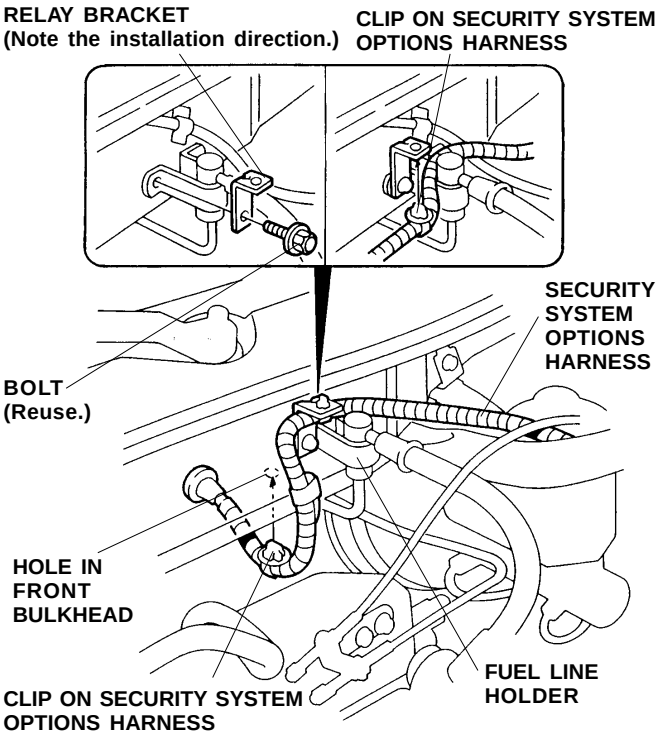


16. Push the clips from the security system options harness into the hole in the relay bracket and into the hole in the front bulkhead.

17. Route the security system options harness through the engine compartment along the left side fenderwell toward the front of the vehicle.

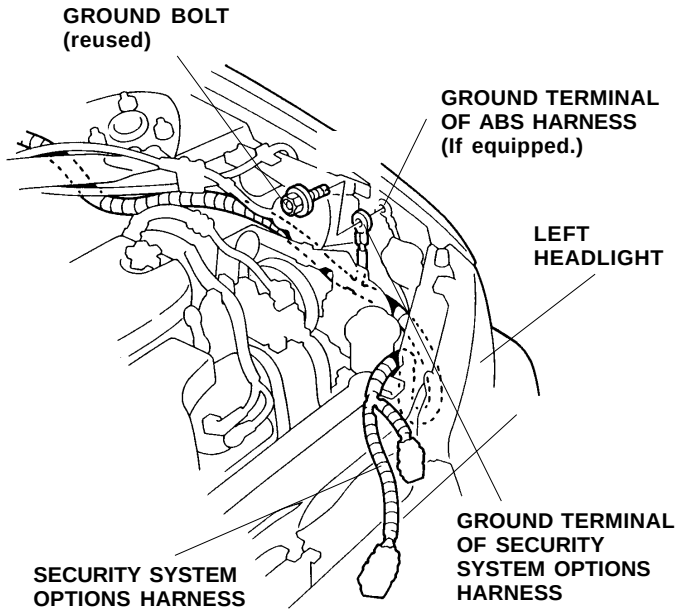


18. Remove and discard the bolt behind the left headlight, and attach the security system options harness ground terminal to the vehicle using the ground bolt from the kit. If the vehicle is equipped with ABS, remove the ABS ground bolt and attach the security system options harness with the ABS ground bolt instead.

19. Loosen the two bolts securing the A/C condenser.

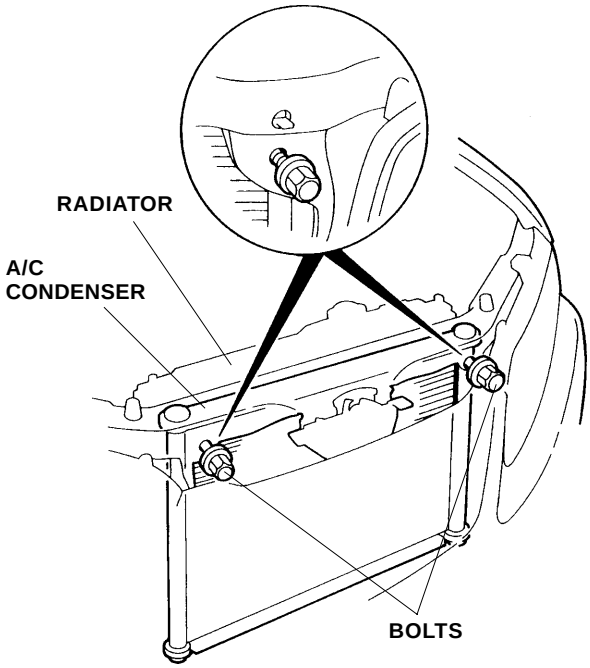


1998 American Honda Motor Co., Inc - All Rights Reserved.

20. Route the long end of the security system options harness to the right side of the vehicle alongside the hood opener cable and to the right side of the center stay. (If you're not installing a hood switch, push the security system options harness connector clip into the hole in the center stay.)

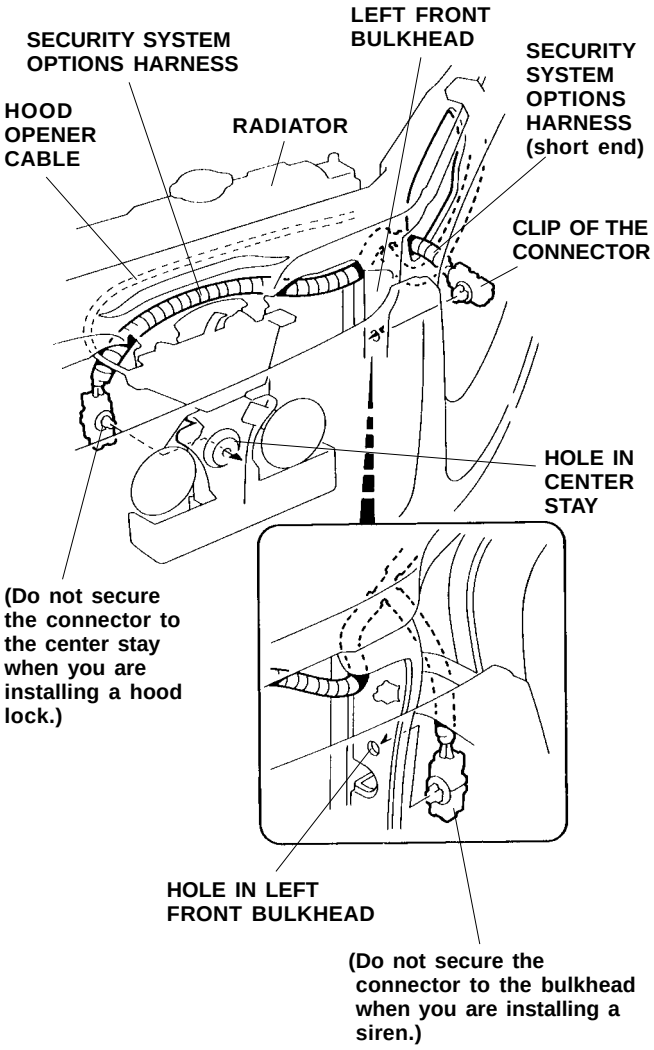
SECURITY SYSTEM OPTIONS HARNESS
LEFT FRONT BULKHEAD
SECURITY SYSTEM OPTIONS HARNESS (short end)
HOOD OPENER CABLE
RADIATOR
CLIP OF THE CONNECTOR
HOLE IN CENTER STAY
(Do not secure the connector to the center stay when you are installing a hood lock.)
HOLE IN LEFT FRONT BULKHEAD
(Do not secure the connector to the bulkhead when you are installing a siren.)

21. Route the short end of the security system options harness through the hole in the bulkhead. Remove the connector clip; it will be attached to the siren connector. (If you're not installing a siren, push the security system options harness connector clip into the hole in the bulkhead.)

22. Secure the security system options harness to the hood opener cable with two short wire ties.

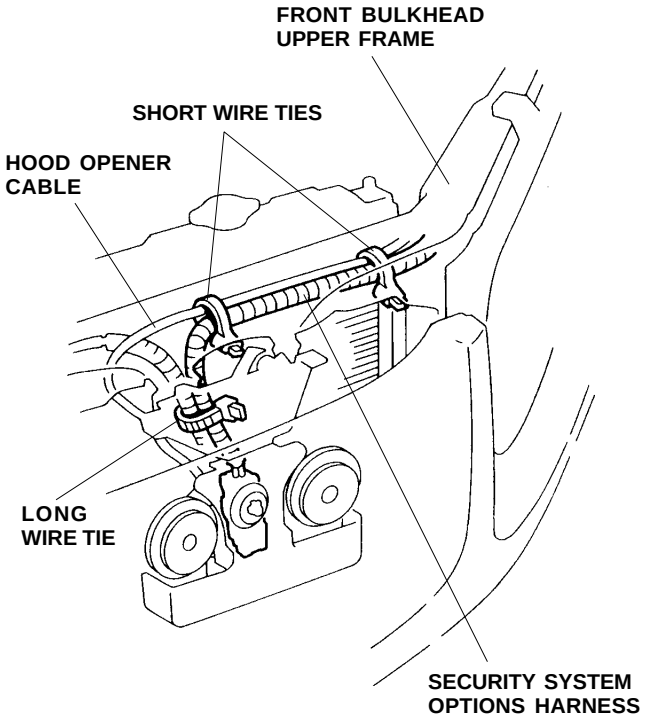


23. Secure the security system options harness to the horn harness with one long wire tie.
24. Inside the engine compartment, secure the security system options harness with six long wire ties and the one wire tie with clip in the areas shown.

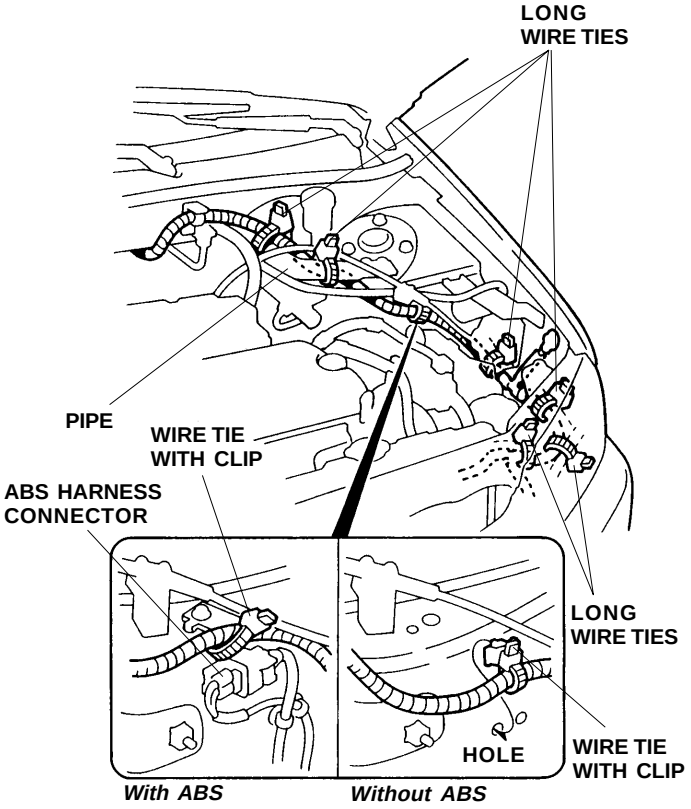



All 20015 (9809)
1998 American Honda Motor Co., Inc - All Rights Reserved.

25. Get the 3-pin connector from the kit. Inside the cabin, plug the terminals of the security system options harness into the 3-pin connector. Note each wire color location.

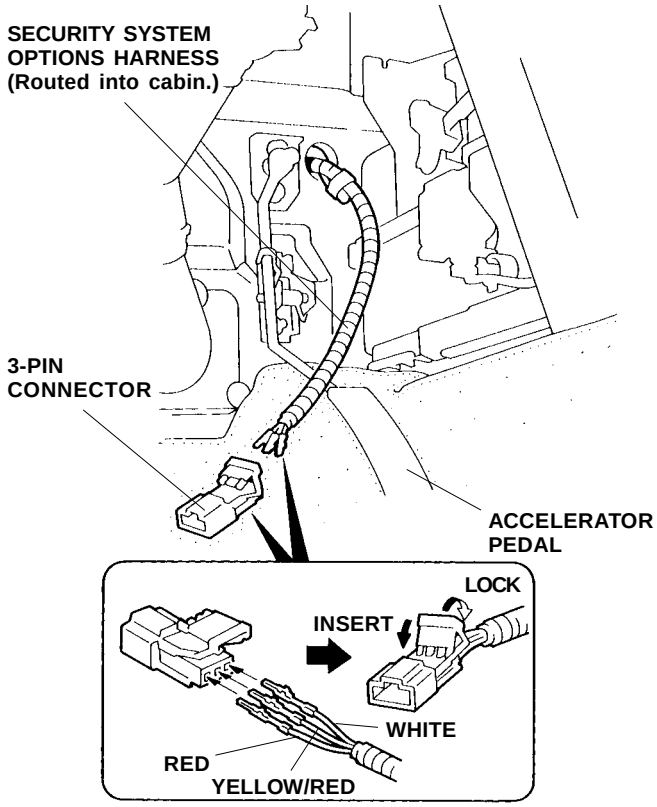


26. Locate the 3-pin connector blue-taped to the security system wire harness, and remove the blue tape to free the connector.

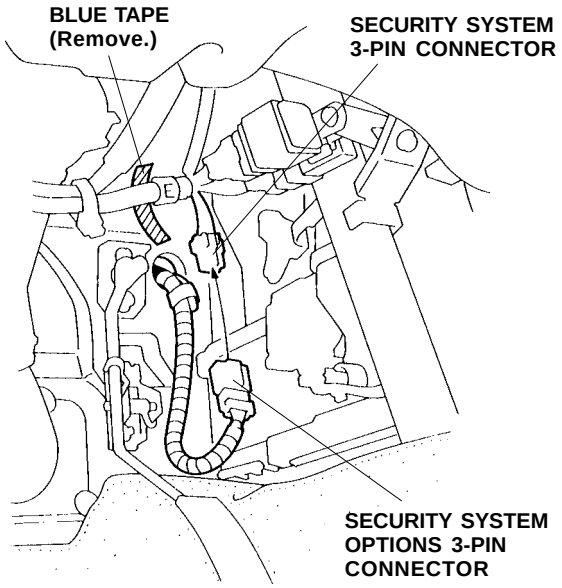


27. Plug the security system options 3-pin connector into the security system wire harness 3-pin connector.

28. Secure the security system options harness to the steering hanger beam with one long wire tie.

***Without Fog Lights***

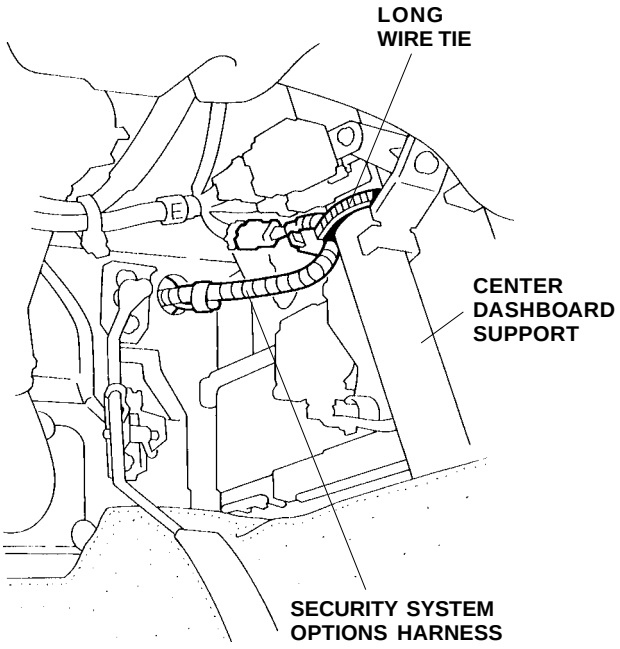


***With Fog Lights***

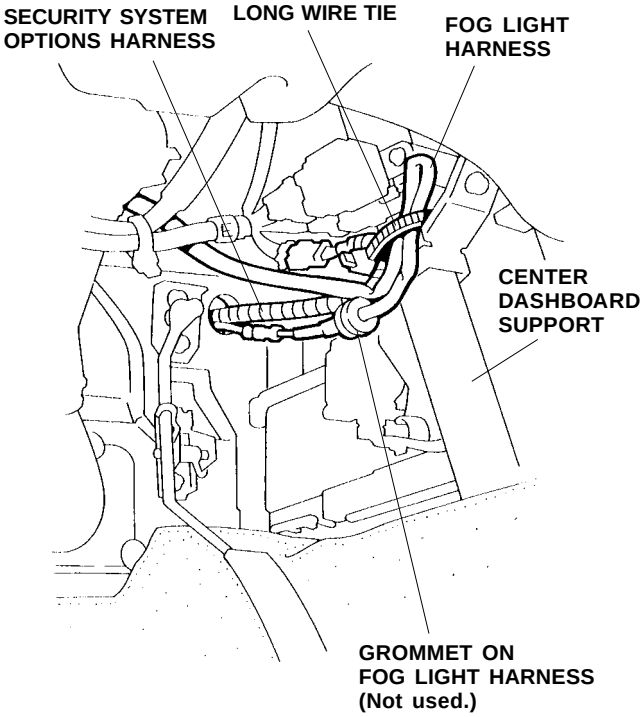


1998 American Honda Motor Co., Inc - All Rights Reserved.

*If you're installing an optional siren, continue with step 28; if not, go to step 35.*

29. Remove the front bumper. Note the locations of the large and small clips. To prevent damage to the bumper, set the bumper on a piece of cardboard.

    ***2-Door**: Two self-tapping screws, two bolts, and eleven clips.*

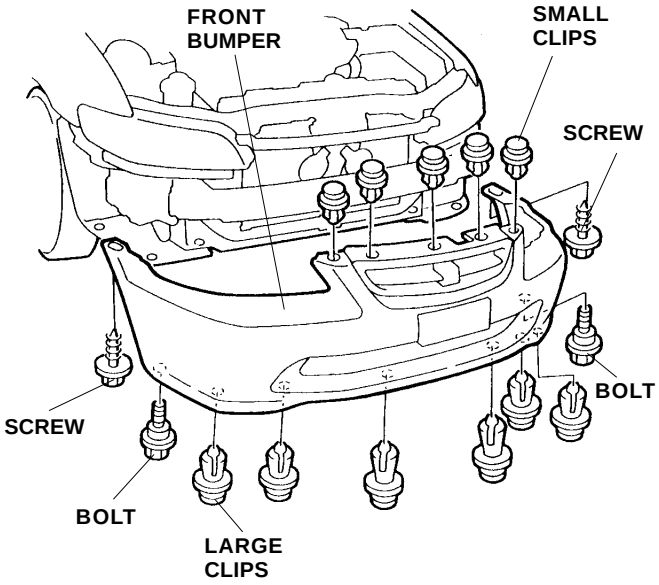


    ***4-Door**: Two self-tapping screws, two bolts, and eight clips.*

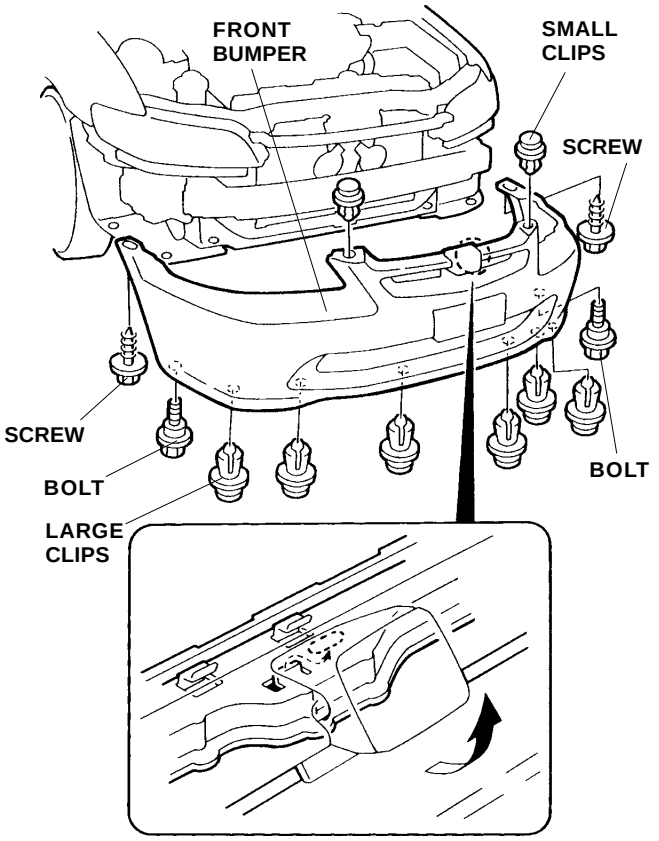


30. Position the siren on the siren bracket, and install the 6 x 32 mm washer-bolt and the 6 mm flange nut.

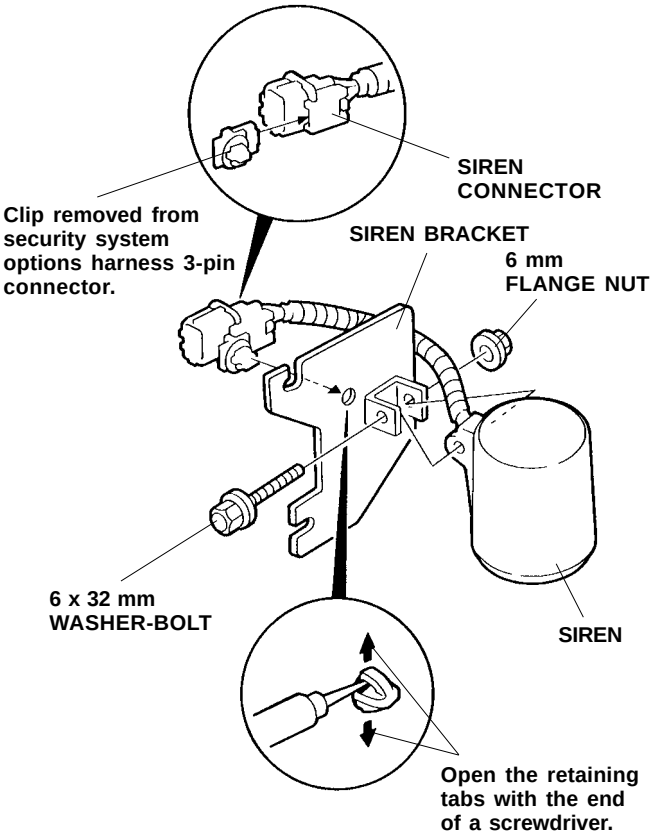
SIREN CONNECTOR
Clip removed from security system options harness 3-pin connector.
SIREN BRACKET
6 mm FLANGE NUT
6 x 32 mm WASHER-BOLT
SIREN
Open the retaining tabs with the end of a screwdriver.

31. Attach the connector clip (removed in step 21) to the siren connector. Push the clip into the hole in the siren bracket, and open its retaining tabs with a small flat-tip screwdriver.



All 20015 (9809)

1998 American Honda Motor Co., Inc - All Rights Reserved.

32. Position the backing plate on the left bulkhead, and install the two 6 x 16 mm washer-bolts. Don't tighten the bolts aT this time.

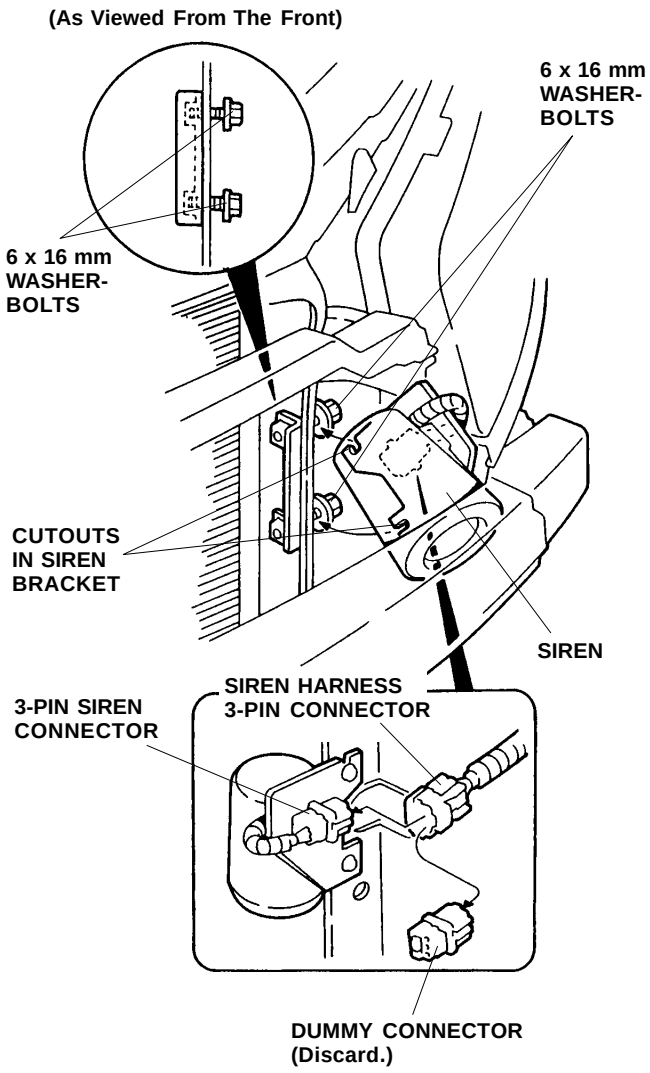


33. Position the cutouts in the siren bracket over the two 6 x 16 mm backing plate washer-bolts in the direction shown. Tighten the 6 x 16 mm washer-bolts securely.

34. Remove and discard the dummy connector from the security system options harness, then plug the connector into the 3-pin siren connector.

*If you're installing an optional hood switch, continue with step 35; if not, go to step 42.*

35. Using a felt-tip pen, mark the location of the existing hood lock bracket at each corner.

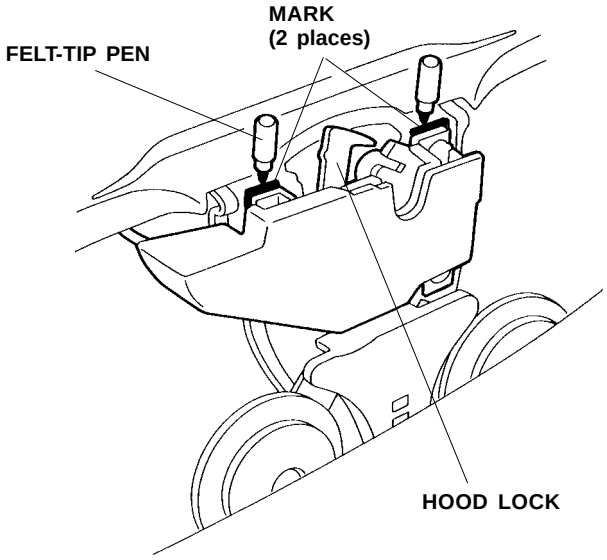


36. Remove and retain the hood lock cover (one clip and two tabs); it will be reused.

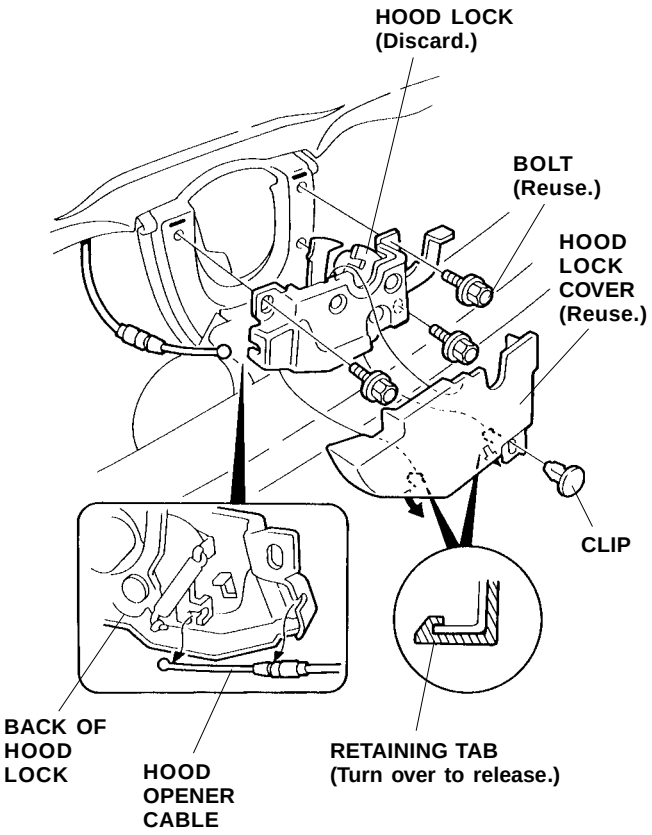


37. Remove and discard the hood lock (three bolts, and disconnect the hood opener cable).

1998 American Honda Motor Co., Inc - All Rights Reserved.

38. Remove and discard the dummy connector from the security system options harness 2-pin connector. Plug in the 2-pin security system options harness connector to the 2-pin hood lock connector.

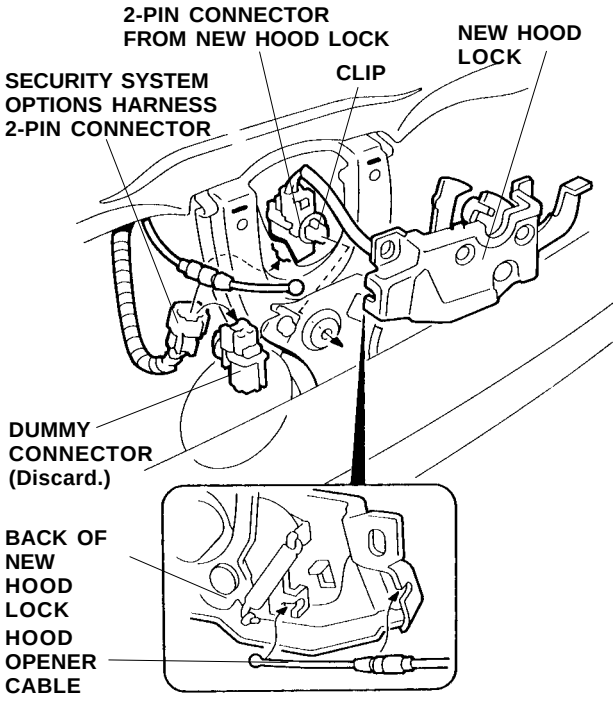


39. Push the clip on the 2-pin connector into the hole in the center stay, then connect the hood opener cable to the new hood lock.
40. Position the new hood lock on the bulkhead upper frame at the position you marked in step 34, and loosely install the three bolts. Shut the hood, and check that the alignment of the new hood lock and the hood latch is correct, and check that the hood is latched securely. When you're satisfied with the results, open the hood and tighten the hood latch bolts securely.

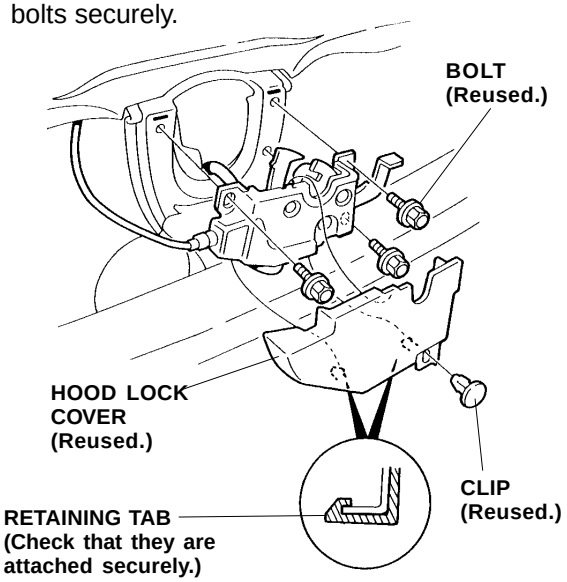


41. Reinstall the hood lock cover.
42. Secure the condenser by tighting the two bolts you loosened in step 19.

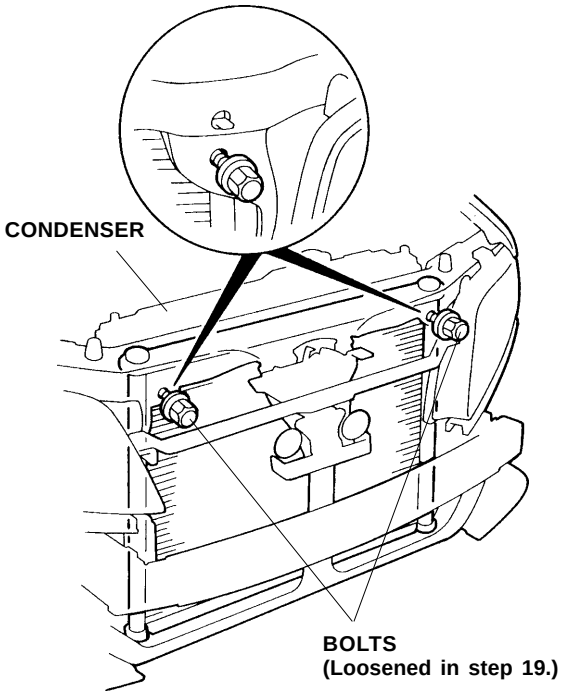


43. Check that all wire harnesses are routed properly and all connectors are plugged in.
44. Reinstall all removed parts.
45. Reconnect the negative cable to the battery.
46. Enter the customer's radio anti-theft code, and reset the radio station presets.
47. Reset the clock.
48. Check operation of the security system options according to the Security System Owner's Manual.


All 20015 (9809)
1998 American Honda Motor Co., Inc - All Rights Reserved.